

**MT431X, MT432X, MT4321X  
MT426X, MT435X, MT436X**



**Mountain  
Plumbing Products**


**3/8" O.D. RIGID SUPPLY TUBES  
FOR TOILET/LAVATORY**

**SPECIFICATION SHEET**

**MT432X & MT4321X**


BULL NOSE SUPPLY TUBE FOR LAVATORY W/ METAL END PIECE

MODEL NO.	DIM A
MT432X	20"
MT4321X	30"

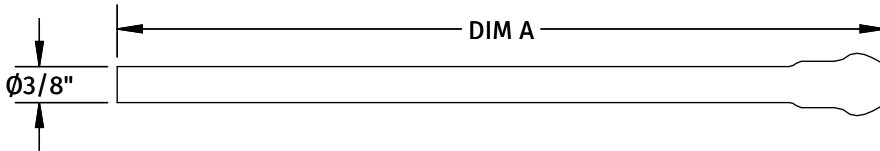

**MT431X**


BULL NOSE SUPPLY TUBE FOR LAVATORY W/ RUBBER END PIECE

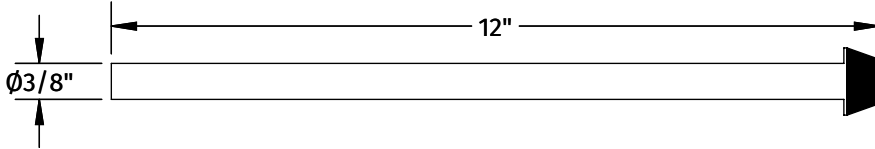

**MT435X & MT436X**


FLAT HEAD RISER SUPPLY TUBE FOR TOILET

MODEL NO.	DIM B
MT435X	12"
MT436X	20"

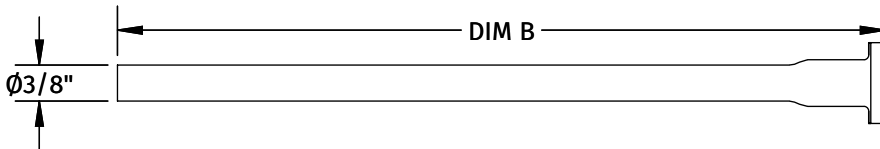

**MT426X**

CORRUGATED SUPPLY TUBE FOR TOILET OR LAVATORY

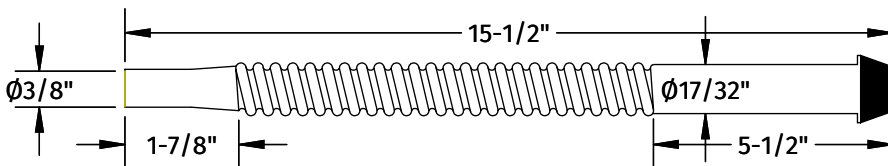

**ALL RIGID SUPPLY TUBES:**

- LEAD FREE MATERIAL
- CAN BE HAND FORMED FOR INSTALLATION, BUT A SPRING BENDER IS RECOMMENDED

**WARRANTY**

FOR WARRANTY INFO PLEASE VISIT [WWW.MOUNTAINPLUMBING.COM/PAGE/RESOURCES/WARRANTY](http://WWW.MOUNTAINPLUMBING.COM/PAGE/RESOURCES/WARRANTY)

**FINISH CARE & MAINTENANCE**

NEVER USE ANY HARSH ALKALI, ACID BASED DETERGENTS OR CLEANERS SUCH AS SOFT SCRUB®, SCRUBBING BUBBLES® OR COMET® TO CLEAN. DO NOT USE BRILLO® OR SCOTCH BRITE® PADS. THESE WILL ALL HARM THE FINISH. TO CLEAN, USE ONLY A DAMP SOFT CLOTH AND WIPE GENTLY. STANDARD WINDEX® CAN ALSO BE USED SPARINGLY. IT IS NOT NECESSARY TO WIPE HARD TO REMOVE SPOTS. TO MAINTAIN THE FINISH, WIPE WITH A SOFT DRY CLOTH AFTER USE. AN OCCASIONAL COAT OF PURE CARNAUBA WAX WITHOUT CLEANERS WILL HELP PROTECT THE FINISH.